


### 3. 缸盖结合组 CYLINDER HEAD ASSEMBLY

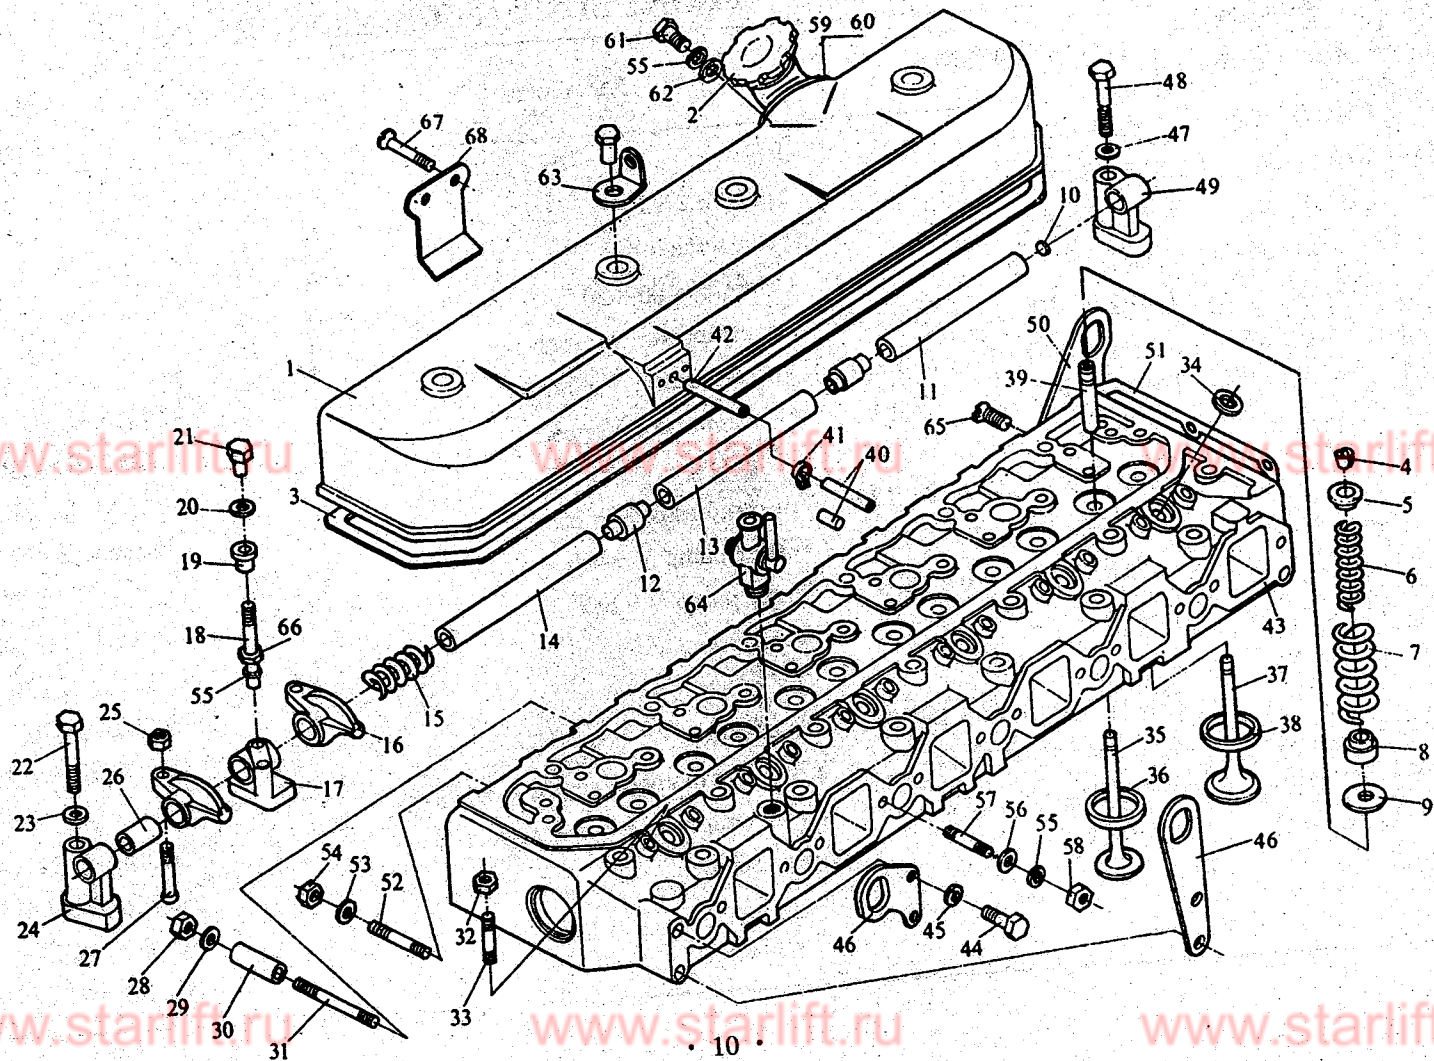

## 3. 缸盖结合组 CYLINDER HEAD ASSEMBLY

序号 No.	零部件号 Part Number	零部件名称 Part Name	数量 Quantity	备注 Remark
1	6102A 01 44	缸盖罩	1	
2	6102 01 23	加油口软塞	1	
3	6102 01 16	密封圈	1	
4	6102 01 46	气门锁夹	24	
5	6102 01 47	气门弹簧座	12	
6	6102 01 14	气门内弹簧	12	
7	6102 01 15	气门外弹簧	12	
8	6102B 01 50	气门密封套结合部	12	
9	6102B 01 45	气门弹簧垫圈	12	
10	4102 01 04	堵片	2	
11	6102 01 37-1	前摇臂轴	1	
12	6102 01 32-1	联接轴	2	
13	6102 01 58-1	中间摇臂轴	1	
14	6102 01 43	后摇臂轴	1	
15	6102 01 52	摇臂弹簧	5	
16	4102 01 03	摇臂	12	
17	6102 01 39	中间摇臂座	6	
18	6102 01 34	摇臂座螺柱	4	
19	6102 01 21	胶圈	4	
20	6102 01 33	垫圈	4	

## 3. 缸盖结合组

## CYLINDER HEAD ASSEMBLY

序号 No.	零部件号 Part Number	零部件名称	Part Name	数量 Quantity	备注 Remark
21	6102 01 35	螺母	Nut	4	
22	6102 01 51	后中摇臂座螺栓	Rocker bracket bolt	9	
23	GB848-76	(平)垫圈 8	Plain washer 8	13	
24	6102 01 42	后摇臂座	Rear rocker bracket	1	
25	GB6171-86	螺母 M8×1	Nut M8×1	12	
26	6102 01 31	摇臂衬套	Rocker bearing	12	
27	6102 01 41	气门间隙调整螺钉	Adjusting screw	12	
28	GB6130-86	螺母 M8	Nut M8	12	
29	6102 01 48	垫圈	Washer	10	
30	6102 01 49	套管	Liner tube	10	
31	GB899-76	螺柱 GM8-M8×75	Stud GM8-M8×75	8	
	GB899-76	螺柱 GM8-M8×85	Stud GM8-M8×85	2	
	GB859-76	(弹簧)垫圈 8	Spring washer 8	2	
32	GB6171-86	螺母 M8×1	Nut M8×1	12	
33	6102 01 53	喷油器螺栓	Nozzle holder stud	12	
34	6102.01 29	防尘圈	Packing	6	
35	4102 01 25	排气门	Exhaust valve	6	
36	6102B 01 07	排气门座圈	Exhaust valve seat	6	
37	4102 01 24	进气门	Inlet valve	6	
38	6102B 01 06	进气门座圈	Inlet valve seat	6	

3. 缸盖结合组 **CYLINDER HEAD ASSEMBLY**

序号 No.	零部件号 Part Number	零部件名称	Part Name	数量 Quantity	备注 Remark
39	6102B 01 08	气门导管	Valve guide	12	
40		软聚氯乙烯管 $\phi 8 \times 1.5 \times 400$	Polyvinyl soft pipe $\phi 8 \times 1.5 \times 400$	1	
	6102BQ-20 01 67	密封套	Gland	1	BQ26b 用 For BQ26b
41	6102 01 18	软管用环箍	Clip	2	
42	6102 01 28	呼吸管	Breather pipe	1	
43	6102B 01 01	气缸盖	Cylinder head	1	
44	GB21-76	螺栓 M10 $\times$ 22	Bolt M10 $\times$ 22	2	
45	GB859-76	(弹簧)垫圈 10	Spring washer 10	2	
46	6102 01 27	后吊耳	Rear hanger	1	
	6102 01 27-1	后吊耳	Rear hanger	1	BQ25d、BQ26b、BQ28b 用 For BQ25d、BQ26b、 BQ28b
47	6102 01 12	前摇臂座铜垫圈	Front rocker arm seat copper washer	1	
48	6102 01 25	前摇臂座螺栓	Front rocker arm seat bolt	1	
49	6102 01 38	前摇臂座	Front rocker arm seat	1	
50	6102 01 17	前吊耳	Front hanger	1	
	6102 01 17-2A	前吊耳	Front hanger	1	BQ25d、BQ26b、BQ28b 用 For BQ25d、BQ26b、 BQ28b
51	6102 01 22	气缸盖前端垫	Cylinder head front gasket	1	
52	GB899-76	螺柱 GM8-M8 $\times$ 25	Stud GM8-M8 $\times$ 25	2	

### 3. 缸盖结合组 CYLINDER HEAD ASSEMBLY

序号 No.	零部件号 Part Number	零部件名称	Part Name	数量 Quantity	备注 Remark
53	6102 01 59	弹性垫圈	Elastic washer	2	
54	GB6130-86	螺母 M8	Nut M8	7	
55	GB859-76	(弹簧)垫圈 8	Spring washer 8	22	
56	GB848-76	(平)垫圈 8	Plain washer 8	7	
57	GB899-76	螺柱 GM8-M8×25	Stud GM8-M8×25	7	
58	GB6171-86	螺母 M8×1	Nut M8×1	7	
59	6102 01 19	缸盖加油口	Oil filler	1	
60	6102 01 21	密封圈	Sealing ring	1	
61	GB21-76	螺栓 M8×25	Bolt M8×25	2	
62	GB848-76	(平)垫圈 8	Plain washer 8	2	
63	6102BQ-20 01.66	弹簧挂耳	Spring suspension loop	1	BQ25d、BQ28b 用 For BQ25d、BQ28b.
64	81C-011.70	暖风进水开关	Warm-air priming cock	1	BQ15、BQ26b、BQ28b 用 For BQ15、BQ26b、BQ28b
65	GB68-76	螺钉 M8×12	Screw M8×12	1	
66	GB6171-86	螺母 M8×1	Nut M8×1	4	
67	GB863-76	铆钉 3×18	Rivet 3×18	2	
68	6102 01 26	挡板	Plate	1	
	6102 01 02	碗形塞	Sealing cup	12	
	6102 01 11-1	堵片	Sealing plate	2	
	6102 02 48	碗形塞	Sealing cup	2	

## 3. 缸盖结合组

## CYLINDER HEAD ASSEMBLY

序号 No.	零部件号 Part Number	零部件名称 Part Name	数量 Quantity	备注 Remark
	6102 01 04	碗形塞	6	
	6102 01 03	碗形塞	3	
	GB5783-86	螺栓 M8×30	1	BQ25b、BQ26b、BQ28b
		螺栓 M12×35	2	用于装前吊耳
	GB5785-86	螺栓 M14×1.5×35	1	For BQ25b、BQ26b、
	GB859-87	垫圈 8	1	BQ28b install front lifting
		垫圈 12	2	eye
		垫圈 14	1	
	GB848-86	垫圈 8	依需要定	
		垫圈 12	According	
		垫圈 14	to need	
注 Nute	4102 01 30	摇臂结合部	12	包括序号 16、26 include No. 16、26