



## 液力车仪表总成

Instrument assembly(Hydraulic transmission)

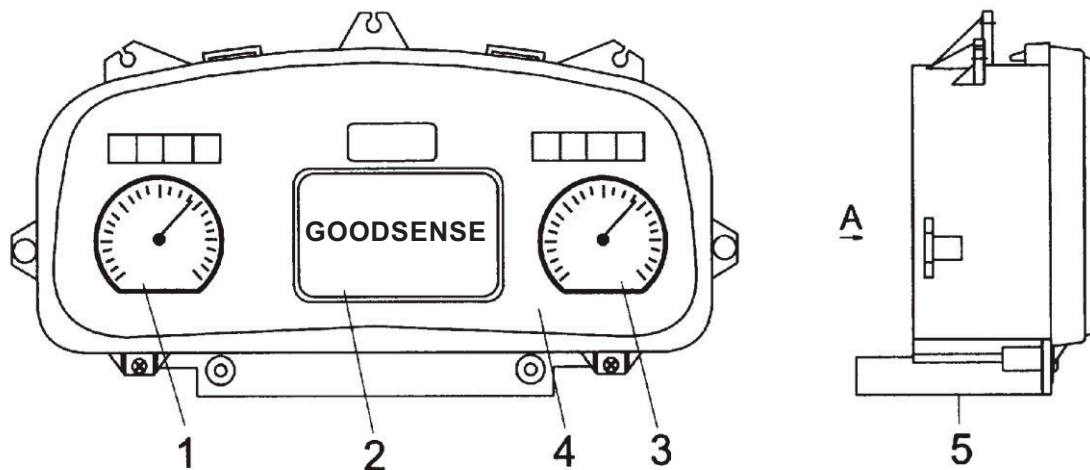


A向

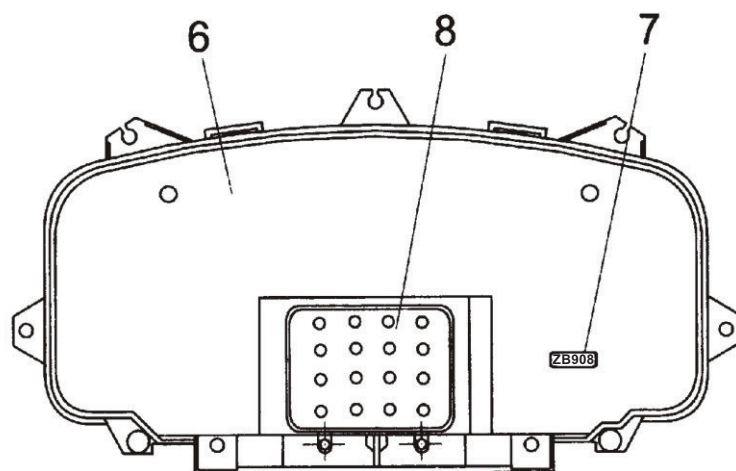

序号	名称
1	水温表盘 Temperature
2	线路板与表芯总成 Circuit board & meter core
3	燃油表盘 Fuel meter
4	面罩 Cover
5	外壳 Shunk
6	后盖板 Rrar cover
7	型号标识 Type sign
8	16线插座 16-wire socket

# 电气系统 Electric system

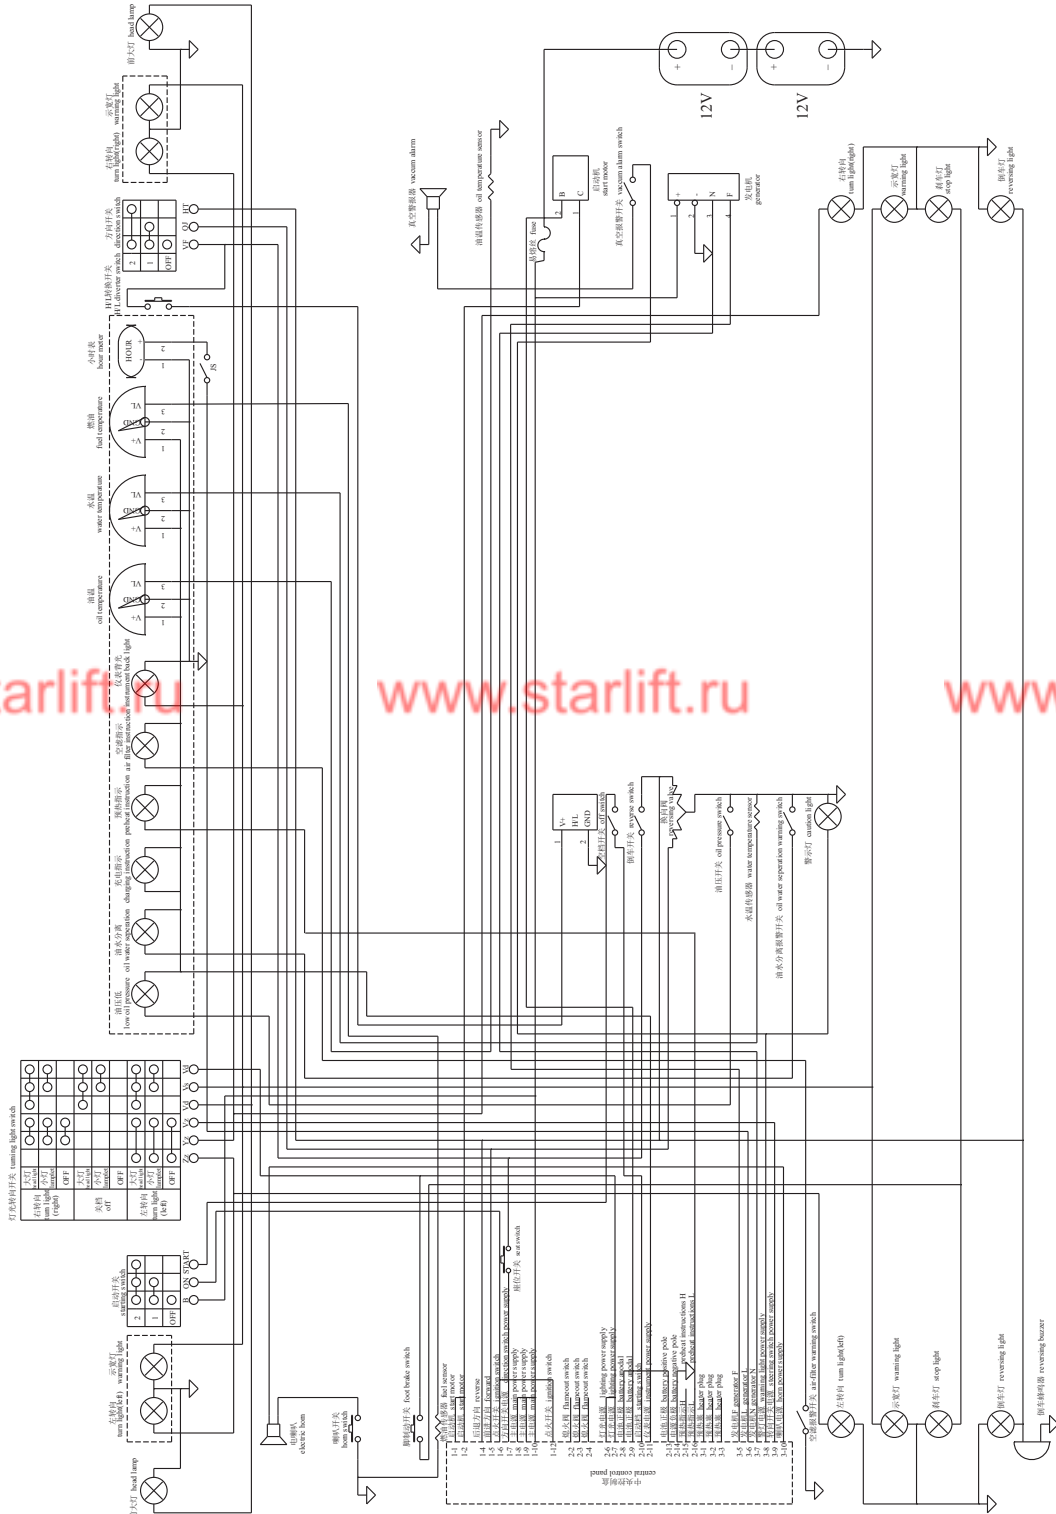


电气线路图(FD50,60,70BG-CY1)  
Electrical circuit diagram(FD50,60,70BG-CY1)

## 电气系统

### Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	DT04G-24WD2	前照灯 Head lamp ass'y	2	
2	DT04G-24ZQX	前小灯 Side lamp ass'y	2	
3	DT02G-JK411	启动开关 Starting switch	1	
4	DT02G-Jk804-5D	组合开关 Integral switch	1	
5	DT01G-ZB908	组合仪表 Combination	1	
6	DT02G-00001	高低速切换开关 High speed switching	1	
7	A30C2-00500	右护顶架线束 Right head guard harness	1	
8	DZ03G-RC3/4	油温传感器 Oil temp sending unit	1	
9	A30B2-00900	熔断线 Fused link wire	1	
10	DZ08G-00005-CY1	启动机 Start motor	1	FD50,60,70BG-CY1
-	DZ08G-00005-W3	启动机 Start motor	1	FD50,60,70BG-W3
-	DZ08G-00005-S3	启动机 Start motor	1	FD50,60,70BG-S3
11	DZ05G-8362G	真空报警开关 Vaccum alarm switch	1	
12	DZ08G-00006-CY1	发电机 Generator	1	FD50,60,70BG-CY1
-	DZ08G-00006-W3	发电机 Generator	1	FD50,60,70BG-W3
-	DZ08G-00006-S3	发电机 Generator	1	FD50,60,70BG-S3
13	A30C2-20002	电瓶 Battery	2	
14	A30G2-00700	电瓶引线(+) Cable	1	FD50,60,70BG-CY1/W3
-	A50B2-00700	电瓶引线(+) Cable	1	FD50,60,70BG-S3
15	A50B2-01100	电瓶连接线 Battery cables	1	
16	A30C2-00800	电瓶引线(-) Cable	1	
17	DZ07G-00003	高速电磁阀 High-speed solenoid valves	1	
18	DZ05G-J209	空档开关 Off switch	1	

# 电气系统 Electric system

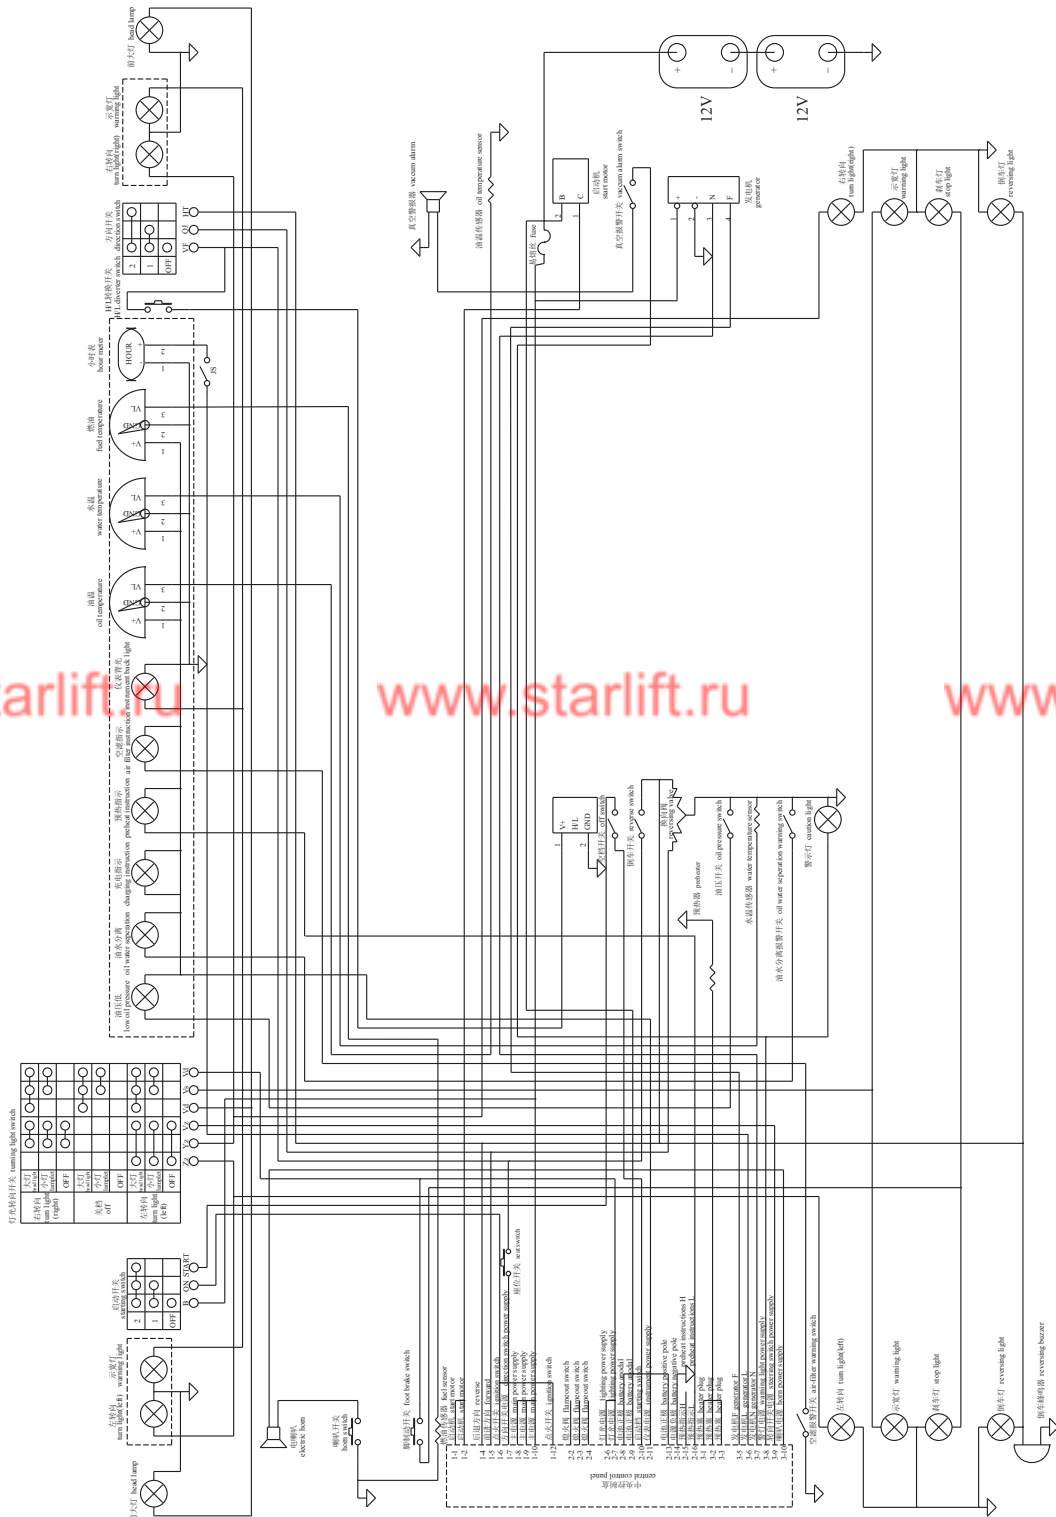

电气线路图(FD50,60,70BG-W3)  
Electrical circuit diagram(FD50,60,70BG-W3)

## 电气系统

### Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
19	DZ05G-J208	倒车灯开关 Reverse switch	1	
20	DZ07G-00004	换向电磁阀 Reversing valve	1	
21	DZ05G-YG408	油压报警开关oil pressure warning switch	1	
22	DZ03G-Z3/8	水温传感器 Water temp sending unit	1	
23	DZ05G-00001	油水分离报警开关 Oil water seperation warning switch	1	
24	DT04G-24H24	警示灯 Caution light	1	
25	180型	捆扎带 Binding	20	
26	DT09G-DJB24B	倒车蜂鸣器 Back buzzer	1	
27	DT04G-XH8-16.3	后排灯 Rear lights	1	
28	DT03G-YG312	燃油传感器 Fuel sensor	1	
29	A50B2-01000	叉车中央电器盒 Panel	1	
30	DT05G-00003	空滤报警开关 Air-filter warning switch	1	
31	DT05G-JK205	脚制动开关 Brake switch	1	
32	DT05G-00002	喇叭开关 Horn switch	1	
33	A50A2-00200	发动机线束 Engine harness	1	FD50,60,70BG-CY1
-	A50B2-00200	发动机线束 Engine harness	1	FD50,60,70BG-W3
-	A50E2-00200	发动机线束 Engine harness	1	FD50,60,70BG-S3
34	A50A2-00300	仪表架线束 Cabinet harness	1	FD50,60,70BG-CY1 /W3
-	A50E2-00300	仪表架线束 Cabinet harness	1	FD50,60,70BG-S3
35	DT09G-DL224ED	电喇叭 Horn	1	
36	A30C2-00400	左护顶架线束 Left head guard harness	1	
37	DT06G-JQ2030-04	启动继电器 Starter relay	1	